



**ICC2 Decoder Module**  
**TW-ICC2-48**  
**Decoder Programming Instructions**




**Underhill International Corporation**  
25782 Obrero Drive, Unit C  
Mission Viejo, CA 92691  
Phone: 949 305-7050 Fax: 949 305-7051  
[www.underhill.us](http://www.underhill.us)

### Decoder Programming

Decoder programming is different from the procedure used for the original ICC controller and Underhill 2Wire Decoder Module so please carefully read the following instructions.


- 1) Connect the red and black decoder wires to the corresponding red and black terminals located in the upper right-hand corner of the ICC 2Wire Decoder Module. See Figure 1-1.

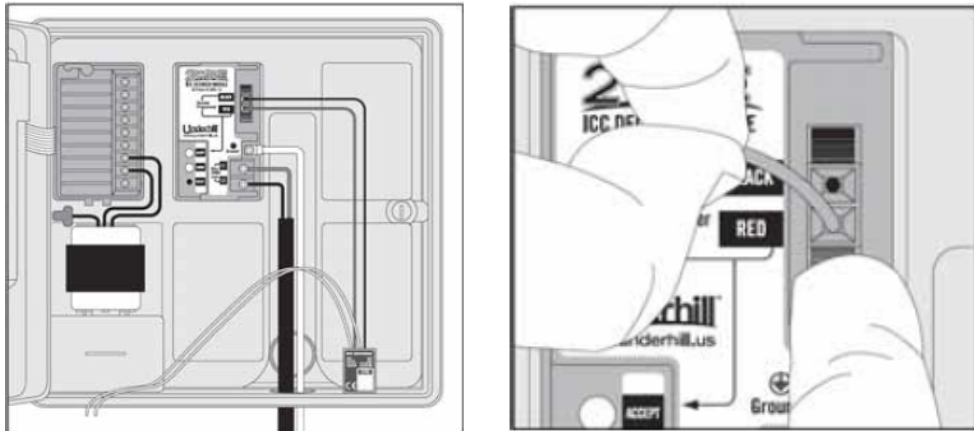

Connect the Red and Black Wires from the Decoder to the Decoder Module

Figure 1-1

- 2) Turn the main menu knob on the Hunter ICC2 to "Manual".
- 3) Press the "Right" arrow button until the desired station number is displayed. See Figure 1-2.

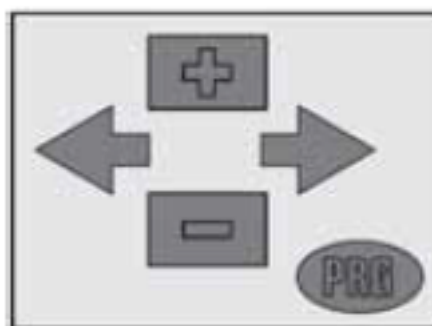

Select the Desired Station Number Using the Right Arrow Button


Figure 1-2

- 4) Press the "+" arrow button to enter a runtime, 1-minute minimum.
- 5) Rotate dial to the RUN position. See Figure 2-1.



**Main Menu Knob of the ICC2 in the RUN Position**  
**Figure 2-1**

- 6) The red LED on the 2Wire Decoder Module will illuminate
- 7) Press the black “Reset” button for a 5-second count on the 2Wire Decoder Module to extinguish the red “Error” LED. See Figure 2-2

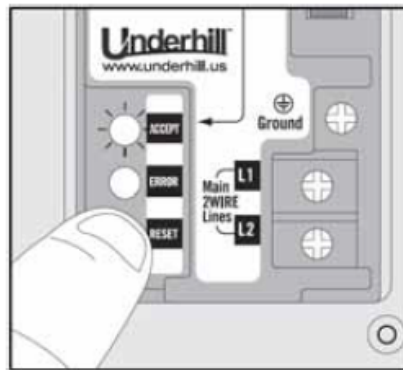

**Press the Black Reset Button**  
**Figure 2-2**

- 8) Press the “Reset” button a second time to complete the programming of the decoder. The green LED will flash repeatedly indicating programming has been completed.

### **Verifying Decoder Programming**

Decoder programming can be verified by moving the red and black decoder wires to the L1/L2 terminals and connecting a known working solenoid to the two yellow wires of the decoder. Use the “Manual” function on the ICC2 to confirm operation for the corresponding station number.